

Review: Recent advances in bovine *in vitro* embryo production: reproductive biotechnology history and methods

L. B. Ferré^{1†}, M. E. Kjelland^{2,3}, L. B. Strøbech^{4,5}, P. Hyttel⁶, P. Mermillod⁷ and P. J. Ross⁸

¹Instituto Nacional de Tecnología Agropecuaria, Ruta Nacional 3, Km 488, Tres Arroyos, Buenos Aires 7500, Argentina; ²Conservation, Genetics and Biotech, LLC, Valley City, ND 58072, USA; ³Department of Biology, Mayville State University, Mayville, ND 58257, USA; ⁴Department of Veterinary and Animal Sciences, Faculty of Health and Medical Sciences, University of Copenhagen, 1870 Frederiksberg C, Denmark; ⁵EmbryoTrans Biotech A/S, 4690 Haslev, Denmark; ⁶Department of Veterinary and Animal Sciences, Faculty of Health and Medical Sciences, University of Copenhagen, 1870 Frederiksberg C, Denmark; ⁷Physiologie de la Reproduction et des Comportements, Institut National de la Recherche Agronomique, Centre National de la Recherche Scientifique, University of Tours, 37380 Nouzilly, France; ⁸Department of Animal Science, University of California, Davis, One Shields Avenue, CA 95616, USA

(Received 17 January 2019; Accepted 17 October 2019)

In vitro production (IVP) of embryos and associated technologies in cattle have shown significant progress in recent years, in part driven by a better understanding of the full potential of these tools by end users. The combination of IVP with sexed semen (SS) and genomic selection (GS) is being successfully and widely used in North America, South America and Europe. The main advantages offered by these technologies include a higher number of embryos and pregnancies per unit of time, and a wider range of potential female donors from which to retrieve oocytes (including open cyclic females and ones up to 3 months pregnant), including high index genomic calves, a reduced number of sperm required to produce embryos and increased chances of obtaining the desired sex of offspring. However, there are still unresolved aspects of IVP of embryos that limit a wider implementation of the technology, including potentially reduced fertility from the use of SS, reduced oocyte quality after *in vitro* oocyte maturation and lower embryo cryotolerance, resulting in reduced pregnancy rates compared to *in vivo*-produced embryos. Nevertheless, promising research results have been reported, and work is in progress to address current deficiencies. The combination of GS, IVP and SS has proven successful in the commercial field in several countries assisting practitioners and cattle producers to improve reproductive performance, efficiency and genetic gain.

Keywords: assisted reproductive techniques, *Bos indicus*, *Bos taurus*, *in vitro* fertilization, sexed semen

Implications

In vitro production of embryos and other assisted reproductive techniques in cattle have shown significant progress in recent years. The combination of *in vitro* production with sexed semen and genomic selection is being successfully and widely used in North America, South America and Europe. Importantly, in 2016 the number of viable *in vitro* production embryos surpassed the number of transferable *in vivo*-produced embryos (multiple ovulation embryo transfer, MOET). This trend shows a shift among seedstock producers from traditional MOET toward IVP. These assisted reproductive techniques have been proven successful in the commercial field, assisting practitioners and cattle producers to improve reproductive performance, efficiency and genetic gain.

Introduction

The scientific and technological advances achieved during the past decades in animal reproduction have resulted in the development of a variety of tools commonly referred to as assisted reproductive technologies (ART). The primary focus of these tools is to maximize the number of offspring from genetically superior animals and disseminate germplasm worldwide (Berglund, 2008). Furthermore, ART allows for the exploitation of donors with compensable anatomical disabilities and sub-fertile conditions, for safeguarding germplasm from threatened species and domestic breeds and for reducing disease exposure and transmission.

While the number of *in vivo*-produced embryos that are collected and transferred worldwide seems to have stabilized in recent years, the transfer of embryos derived and transferred from *in vitro* production (IVP) continues to grow at an average annual growth rate of 12% (Figure 1a). In 2016, and for the first time in recorded history, the number

† Email: ferre.luis@inta.gob.ar

of viable IVP embryos surpassed the number of transferable *in vivo*-produced embryos, based on data recorded by the International Embryo Transfer Society (IETS). However, this historic event is only based on the declared data submitted to IETS by volunteer participants, and as such it likely does not include the overall number (i.e., declared plus undeclared embryo production) of IVP and *in vivo*-produced embryos worldwide; therefore, it is within the realm of possibility that the actual event could have occurred even earlier. These trends show a shift among seedstock producers from traditional MOET and toward IVP (Figure 1a). Interestingly, this aforementioned shift is combined with a tendency toward increased efficiency of the IVP procedures (Figure 1b).

According to the annual embryo production statistics presented by the IETS in recent years, more than 400 000 bovine IVP embryos were transferred worldwide (Figure 1a). Of the total embryos transferred, around 80% of them were transferred fresh (Figure 2). This reflects the fact that

embryos produced *in vitro* have lower cryotolerance than their *in vivo* counterparts. In the late 1990s, the quantity of frozen-thawed embryos (both *in vivo* and IVP) transferred was practically similar to fresh (non-cryopreserved) embryos. Subsequently, the ratio of fresh IVP embryos transferred increased, but in recent years (2014 to 2016) there had been an increase in the number of transfers of frozen-thawed IVP embryos, possibly due to the use of advanced formulated culture media without (or with low) serum content and/or with specific embryotrophic additives promoting embryo quality. Another potential reason behind the increase in frozen-thawed IVP embryo transfers may be due to the improved efficiency linked to the use of co-culture in IVP.

Towards the end of the 1980s, the combination of the ultrasound-guided oocyte retrieval technique (Pieterse *et al.*, 1988), usually referred to as ultrasound-guided ovum pick-up (OPU) (Ward *et al.*, 2000), and IVP became available. Several European artificial insemination centers implemented OPU-IVP as the primary tool to multiply genetically high merit

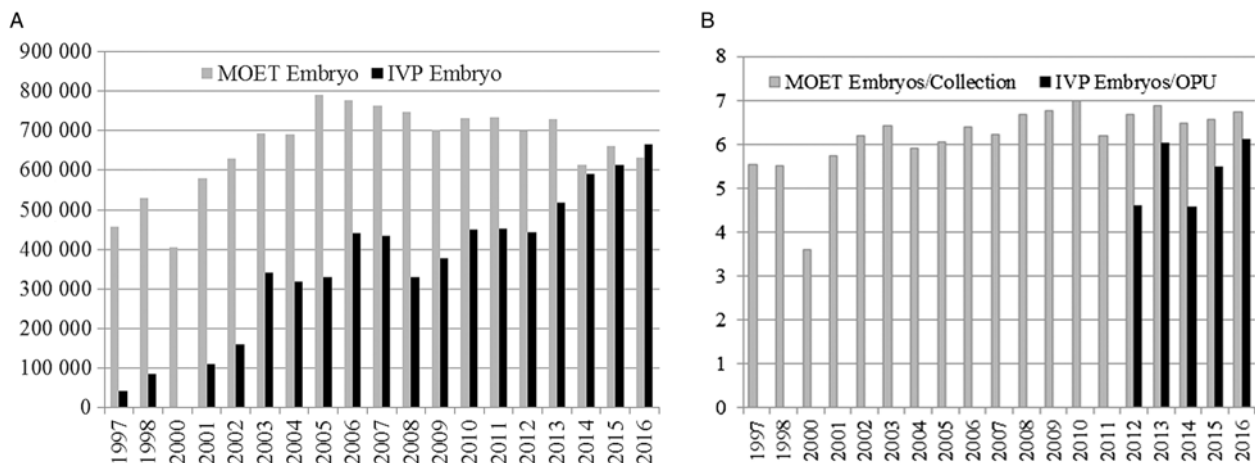


Figure 1 Evolution of *Bos indicus* and *Bos taurus* *in vivo*-produced embryos (MOET) and *in vitro*-produced (IVP) embryos worldwide (a) and embryo yield per collection/ovum pick-up (OPU) (b) as registered by the International Embryo Transfer Society (IETS, http://www.iets.org/comm_data.asp).

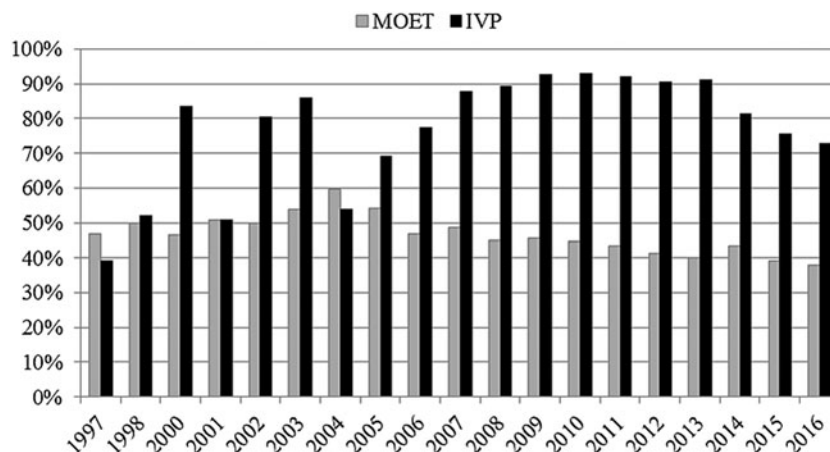


Figure 2 Percentage of fresh *Bos indicus* and *Bos taurus* *in vivo*-produced embryos (MOET) and *in vitro*-produced (IVP) embryos transferred worldwide registered by the IETS (http://www.iets.org/comm_data.asp).

animals. In the USA the OPU-IVP technology combination was adopted on a commercial level in the late 1990s. By then, it was primarily used to produce embryos from 'problem' females that for different reasons could not generate viable embryos by conventional MOET. Under these circumstances, the commercial development of the technology was slow, whereas more recently, and fueled by the introduction of sexed semen (SS) and genomic selection (GS) of embryos (Johnson, 1995; Welch and Johnson, 1999), the commercial application of IVP has greatly increased (Sirard, 2018).

Recent IVP results (Gonzalez-Marin *et al.*, 2017) and the fact that SS from more elite bulls is being made available both contribute to IVPs' continued gain in the cattle market. A major factor that stands out for the increase in IVP can be attributed to the 'reverse sorting' technology, which consists of thawing a few straws of conventional non-sexed semen, then sex sorting the sperm using flow cytometry, followed by using the sexed sperm for IVP immediately thereafter (Morotti *et al.*, 2014). This method, perfected by Trans Ova Genetics, allowed for sex sorting almost any stored, cryopreserved bovine semen available.

New genetic tools led to improved animal selection by GS and allowed accelerated genetic gain and progress (Goddard *et al.*, 2010). The combination of ART (MOET, IVP) and GS maximizes genetic gain (Ponsart *et al.*, 2013) in cattle (Figure 3). In addition, the conjunction of biopsies obtained from non-implanted embryos or amniocentesis with GS in younger heifers has increased the genetic selection pressure even further (Kasinathan *et al.*, 2015). Although some limitations of these approaches have been found (e.g., extra cost and ethical considerations (Kasinathan *et al.*, 2015)), a recent study indicated that embryo biopsy does not affect the viability and pregnancy rate of IVP-derived embryo (de Sousa *et al.*, 2017).

Embryos can be derived by IVP from open-cycling heifers and cows as well as females that do not respond properly to superovulatory treatments, have abnormalities in their reproductive tract compromising gamete transport, or are in terminal conditions (age, health, accident). Likewise, pregnant animals during the first trimester of pregnancy, *postpartum* cows (lactation) and from pre-pubertal calves can be employed for IVP, as well as ovaries collected at abattoirs (Galli *et al.*, 2003).

The first calves obtained exclusively by IVP, that is, *in vitro* maturation (IVM) of oocytes, *in vitro* fertilization (IVF) as well as *in vitro* embryo development (IVD), were reported in the late 1980s (Goto *et al.*, 1988). Significant progress has been made in understanding gamete/embryo requirements and metabolism allowing for formulation of better culture media to achieve a higher total production and embryo quality (Hansen, 2006) and a reduction in the occurrence of the large offspring syndrome (LOS) (Farin *et al.*, 2001). Major advances in IVP today seek to improve overall performance at all stages: ovarian stimulation, oocyte recovery, maturation, fertilization, embryo development, freezing, transfer and pregnancy establishment.

Ovarian treatment and oocyte recovery

Oocytes for IVP can be obtained by (1) ultrasound-guided follicular aspiration from live animals or by ovariectomy or (2) *postmortem* follicular aspiration (abattoir-derived ovaries). In both scenarios, oocytes are aspirated from a heterogeneous pool of antral follicles, 2 to 8 mm in size, including follicles from both non-ovulatory and ovulatory follicular waves as well as dominant and subordinate follicles in these waves. Oocytes in the large dominant

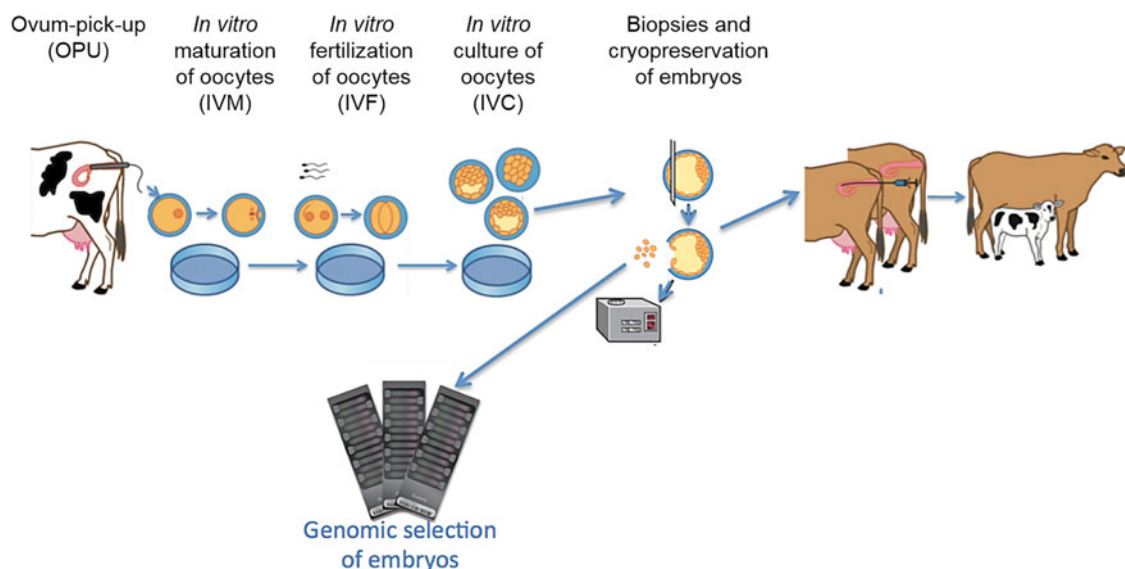


Figure 3 (Colour online) Flow of the process for *Bos indicus* and *Bos taurus* ovum pickup (OPU), *in vitro* maturation (IVM) of oocytes, *in vitro* fertilization (IVF), *in vitro* culture (IVC) of embryos, collection of biopsies, genomic selection using single nucleotide polymorphism (SNP) markers and cryopreservation.

follicles will be in the process of the so-called pre-maturation or capacitation, building up their competence for final maturation, for fertilization and for sustaining embryonic development (Hyttel *et al.*, 1997).

In the case of follicle aspiration (Bols *et al.*, 2005) it is possible to obtain four to five usable (grades 1 and 2; (de Loos *et al.*, 1989)) oocytes per donor session (Hasler, 1998) from *Bos taurus* unstimulated females, while stimulation by FSH can increase oocyte recovery rates to 20 per Holstein donor session (Vieira *et al.*, 2016). Donors (open, pregnant, pre-pubertal) can be subjected to follicular aspiration with a frequency of one to two times a week, with or without stimulation (Chaubal *et al.*, 2007). During intensive OPU schemes (e.g., twice a week) special care must be taken into consideration, such as animal welfare, repetitive epidural anesthesia, ovary stroma integrity and adhesions (McEvoy *et al.*, 2006). Consequently, more embryos can be produced from stimulated donors (Chaubal *et al.*, 2007). Only limited efforts have been devoted to enhancing the current synchronization and stimulation protocols for OPU donors.

In *Bos indicus* cattle, the use of FSH prior to OPU remains controversial. Some studies have shown an increase in the number of total oocytes recovered, viable oocytes, embryos produced and conception rates after transfer (Fernandes *et al.*, 2014), while others argue that FSH stimulation reduces cleavage, blastocyst and hatching rates (Monteiro *et al.*, 2010). Importantly, there are cases reported for *Bos indicus* in which FSH stimulation prior to OPU also has resulted in positive effects on IVP and the resulting pregnancy rates (Cavaliere *et al.*, 2017). It should be noted though that generally in the field (on-farm situations), practitioners do not synchronize and stimulate *Bos indicus* donors due to cost-effectiveness outcome, as *Bos indicus* generally produces more oocytes per aspiration without synchronization nor stimulation compared to *Bos taurus*, 15.1 ± 1.9 v. 7.8 ± 0.8 , respectively (Mean \pm SD) (Fernandes *et al.*, 2014). Even though a significant difference was found in the control v. the synchronized groups for both *Bos indicus* and *Bos taurus*, FSH stimulation was only significantly effective in *Bos taurus* donors (Fernandes *et al.*, 2014), highlighting the need to consider cost/biological success as a decisive factor in determining which method is used.

To modify the oocyte quality within the follicle it is necessary to manipulate follicular dynamics and function through hormonal treatments (Merton *et al.*, 2003) and/or dietary regimes (Webb *et al.*, 2004). Several approaches have been suggested to improve the number of follicles and oocyte quality (measured as the rate of viable embryos) in OPU programs. The strategies include: (1) donor stimulation with gonadotropins (Sendag *et al.*, 2008), (2) partial *in vivo* pre-maturation, termed 'coasting' (Nivet *et al.*, 2012) and (3) dietary supplementation with energy concentrates rich in fatty acids (Dunning *et al.*, 2014).

Notably, ultrasound screen resolution and probe characteristics have a great impact on oocyte recovery efficiency (Bols *et al.*, 2004) and, perhaps more importantly, in reducing

the risk of causing unnecessary damage to the ovarian tissue. Newer ultrasound machines show small diameter follicles (2 to 3 mm) which may not be ideal for retrieving oocytes, but still suitable for selecting donors based on the ovarian antral follicle count (Silva-Santos *et al.*, 2014). Cumulus oocyte complex (COC) retrieval is highly correlated with embryo production and the number of pregnancies (Watanabe *et al.*, 2017), but not with pregnancy rate (Feres *et al.*, 2018). Newer Doppler ultrasonography features allow follicular blood flow evaluation, which can be used to prevent blood contamination in the collection tube. Laparoscopic ovum pickup (LOPU) has recently gained interest among commercial IVP companies as a viable tool to recover COCs from calves at 2 to 6-months of age (Baldassarre *et al.*, 2018). This technique, mainly used in small ruminants (Cognié *et al.*, 2003), could contribute to accelerate dissemination of superior genetics, further encouraging the genetic improvement through top genomic young animals.

Oocyte maturation

Oocyte maturation includes nuclear as well as cytoplasmic changes in the developing gamete. Nuclear oocyte maturation refers to the progression of meiosis from the prophase of the first meiotic division to the metaphase of the second meiotic division (MII) at the time of ovulation. Along with nuclear maturation a series of changes in organelles, proteins and transcripts take place in the oocyte constituting the cytoplasmic oocyte maturation (Hyttel *et al.*, 1997). Meiosis arrests at MII until fertilization, when it resumes and completes the segregation of the second polar body (Sirard, 2001).

Under *in vitro* conditions, oocytes will normally complete nuclear maturation to MII within 20 to 24 h and then will be ready for fertilization (Leibfried-Rutledge *et al.*, 1987). Along with the nuclear maturation, the oocytes complete a cytoplasmic maturation that mimics the cytoplasmic maturation seen under *in vivo* conditions although the aberrancies in the precise migration of the cortical granules of significance for preventing polyspermic fertilization have been noted *in vitro* (Hyttel *et al.*, 1986). The heterogeneous source of the aspirated immature oocytes retrieved from ovarian follicles at different phases of the follicular growth can result in compromised developmental competence due to improper completion of the cytoplasmic oocyte maturation (Mermillod *et al.*, 1999). Around 85% to 90% of the cultured immature oocytes will reach MII at the end of IVM under proper conditions. Although this success rate may be interpreted as satisfactory, oocyte cytoplasmic maturation and full acquisition of developmental competence are in many cases not automatically accompanying the nuclear maturation and may account for fertilization and/or development deficiencies (Watson, 2007). In this regard, oocytes matured *in vivo* yield more blastocysts compared to their IVM counterparts (Sirard and Blondin, 1996). Oocyte quality/competence represents a

major factor in determining blastocyst development rates (Krisher, 2004). Improving the direct assessment of nuclear and cytoplasmic maturation by non-invasive methods could allow for future selection of the competent oocytes (Fulka *et al.*, 1998).

The major research line in this field is the concept of *in vitro* prematuration, maintaining the oocytes at the germinal vesicle (GV) stage in culture to allow them to end their differentiation before meiotic resumption. Indeed, meiotic resumption induces chromosome condensation and, in turn, arrest of transcription that may block the synthesis of maternal messenger RNA (mRNA) that will be necessary for embryo development before embryonic genome activation. It is possible to block meiotic resumption of cattle oocytes by specific inhibitors of the M-Phase Promoting factor (MPF), involved in GVBD, chromosome condensation and spindle formation; however, inhibiting meiosis for 24 to 48 h did not increase oocyte competence (Mermillod *et al.*, 2000). More recently, the concept of stimulated physiological oocyte maturation (SPOM) emerged as a promising approach to improve IVM (Albuz *et al.*, 2010). This method combines the meiotic inhibition for 12 h by drugs increasing the oocyte cAMP level and stimulation of maturation by FSH, resulting in slower maturation (6 h longer) and increased development rate and quality after IVF. Even if this methodology is still controversial (Guimarães *et al.*, 2015), it represents a promising direction for further research.

Inside the follicle, oocyte and surrounding somatic cells are in constant interaction through gap junction and factors transmitted by the follicular fluid (FF). These interactions are determining factors for the success of oocyte differentiation, leading to developmental competence. Many compounds found in FF, including growth factors produced by granulosa cells or by the oocyte itself, have been described (Rodgers and Irving-Rodgers, 2010). More recently, extracellular vesicles (EVs), including exosomes, have been described in the FF (Di Pietro, 2016). These EVs originate from somatic cells and the oocyte and contain a diversified cargo, including proteins, mRNA, microRNA and lipids (Santonocito *et al.*, 2014). These exosomes are involved in oxidative attack protection (Saeed-Zidane *et al.*, 2017), miRNA signaling, inducing transcription modulation in early embryos (Gross *et al.*, 2017) and regulating cumulus expansion (Hung *et al.*, 2015). Altogether, a further study of FF exosomes may allow for the improvement of IVP results (da Silveira *et al.*, 2017) and help to define markers of oocyte quality.

Fertilization

After completion of IVM, oocytes are co-incubated with spermatozoa for up to 18 to 24 h while undergoing IVF. The sperm–oocyte interaction in the fertilization dish occurs in a microenvironment of 50 to 100 μ l for low numbers of OPU donor oocytes, and usually a microenvironment of >400 μ l for abattoir mass-collected oocytes (Gordon,

2003). Usually the spermatozoa are washed and selected using swim-up or density gradient centrifugation procedures to remove freezing media, seminal plasma, debris and dead spermatozoa and to select the more motile fraction. The spermatozoa must also be treated with capacitating factors in order to acquire the ability to penetrate the zona pellucida (ZP) of the oocyte (Parrish *et al.*, 1986). The minimum number of spermatozoa required per oocyte is not well defined due to a large variation between bulls and breeds although generally a concentration of 1 to 2 million spermatozoa ml^{-1} is commonly used for IVF (Ward *et al.*, 2002). Therefore, large numbers of oocytes can be fertilized using conventional frozen semen as compared with the traditional 2.1 million sexed spermatozoa per straw. Fertilization efficiency can be optimized, even at lower sperm concentrations of $<0.5 \times 10^6/\text{ml}$, by selecting a high fertility bull or multiple bulls (pooled; Lu and Polge, 1992) and/or adjusting capacitating factor concentration, drop size and oocyte density (Van Soom *et al.*, 1991). In some cases, such as commercial IVP programs, sire selection by lab personnel is not possible or at least restricted by customer choice. Despite this reality, a main factor to consider is the motile sperm : oocyte ratio, which can be as low as 600 : 1 (An *et al.*, 2017) to 5000 : 1 (Tanghe *et al.*, 2000). In the case of sexed sperm the sperm : oocyte ratio should be a little higher ranging from at least 600 to 1200 : 1 (Xu *et al.*, 2006) to 1500 to 2250 : 1 (Lu and Seidel, 2004). Unfortunately, the aforementioned relevant information is not clearly detailed in scientific journal articles.

Fertilization rate, measured as the cleavage rate at 48 h post-insemination (and assuming parthenogenesis is not taking place), usually ranges between 70% and 85%. A major advantage of IVF is that it requires a small number of spermatozoa to fertilize the collected oocytes, which at least at a glance favors the utilization of SS that typically has a dose of around 2.1 million sperm *v.* Sexed Ultra with 4 million sperm per straw. Initially, commercially available SS from AI centers was used. More recently, a procedure called reverse sorting of sperm (as described earlier) was developed to sort conventionally frozen semen before use in IVF (de Graaf *et al.*, 2007). The feasibility of reverse sorting was demonstrated when used in a large-scale donor IVP program (Morotti *et al.*, 2014). This technological breakthrough allowed seedstock producers to produce sex-specific embryos through IVP from their top females with the best genetic merit sires. Table 1

Table 1 Differences and similarities between *Bos indicus* and *Bos taurus* reverse sorted semen and conventional SS

	Reverse sorted semen	Conventional SS
Semen origin	Frozen straws	Fresh semen collected from sires
Sorting procedure	Flow cytometry	Flow cytometry
Final product	Fresh sorted sperm	Frozen SS straws
Final target	IVP	AI/IVP

SS = sexed semen; IVP = *in vitro* production; AI = artificial insemination.

summarizes the differences and similarities between reverse sorted and conventional SS. Presently, reverse sorting is only being used in IVP due to the small number of sexed sperm cells recovered (de Graaf *et al.*, 2007).

Presently, a limited amount of scientific literature has been published regarding the use of SS in IVP. The data primarily describe the performance under regular IVF conditions and differences between bulls (An *et al.*, 2017). SS has commonly been used under similar conditions and protocols as conventional semen, and this has probably contributed to the low rates of cleavage and embryo development (Zhang *et al.*, 2003). Therefore, penetration of the oocyte ZP appears to be a major obstacle when using SS (Lu *et al.*, 1999; Lu and Seidel, 2004). Potential underlying causes of this impaired functionality may be low post-thaw survival and motility, impaired capacitation and hyperactivation, and problems with acrosome integrity and fluorescent dye–DNA interaction (Garner, 2001).

Few reports have been sufficiently rigorous in comparing SS with conventional semen, taking factors as sire identity, ejaculate, sperm and heparin concentrations into account (Liu *et al.*, 2015), whereas other articles do not allow for a proper comparison because the semen does not come from the same ejaculate (i.e., splitting the ejaculate and using portion for conventional semen and the other portion for SS) or this information is not clear (An *et al.*, 2017). A couple of articles that specifically made this kind of a same sire sexed to conventional sperm comparison were conducted by Bermejo-Alvarez *et al.* (2010a, 2010b). Bermejo-Alvarez *et al.* (2010b) found that gene-expression variation may play a significant role in gender-specific early embryo development, specifically transcriptional differences occurring during preimplantation and therefore not attributable to sex-specific hormonal actions. Bermejo-Alvarez *et al.* (2010a) revealed mRNA abundance differences between bulls, but not between X- and Y-sorted spermatozoa, although sex-related differences were observed between male and female blastocysts for three genes (*GSTM3*, *DNMT3A* and *PGRMC1*).

The use of SS in IVP has shown mixed results (Lu *et al.*, 1999; Zhang *et al.*, 2003; Blondin *et al.*, 2009; Xu *et al.*, 2009). This high variability could be explained based on different lab protocols and the lack of standardized IVF conditions for SS. During the flow cytometry sorting process, sperm is subjected to different treatments such as DNA staining, dilution effect, centrifugation forces, high pressure, electrical charge, laser emissions and cryopreservation (Garner *et al.*, 2013). The cause of diminished functional capacity of sex-sorted spermatozoa seems to be most likely multifactorial and cumulative. Consequently, post-thaw survival, sperm integrity, acrosome status, membrane functionality, motility pattern, DNA quality and/or the accumulation of insults ('addition effect') could be affected or compromised. A distinguish characteristic of flow cytometric sorting of X and Y chromosome-bearing sperm is a marked reduction in post-thaw motility and average life-span (Suh *et al.*, 2005). In order to compensate or attenuate

these inefficiencies, different adjustments have been tested (gametes co-incubation time, sperm dose sperm and heparin concentration; Lu and Seidel, 2004; An *et al.*, 2017). Nevertheless, the comparison between SS *v.* conventional unsorted semen could be inappropriate if sire identity (of proven fertility) and ejaculate batch is not clearly stated (Liu *et al.*, 2015).

Before fertilization, sperm need to travel through the female genital tract to reach the oviduct. Microendoscopic studies in sheep showed that this transit is very fast (Druart *et al.*, 2009). During the path to fertilization, oviduct secretions prime the sperm, protect both gametes against ROS, facilitate the fertilization process and promote an adequate microenvironment for the embryo to grow (Li and Winuthayanon, 2017). Oviduct secretions have been recognized to have the capacity to modulate sperm function and enhance sperm motility, capacitation, acrosome reaction and sperm–zona binding interaction (Killian, 2011). Furthermore, oviduct secretions may also contribute to increase monospermy fertilization through the modulation of the ZP, which affects sperm–oocyte interaction and, ultimately, contribute to ameliorate the control of polyspermy (Mondéjar *et al.*, 2013).

Once sperm reach the utero-tubal junction, sperm will be trapped and released progressively to reach the oocyte at the fertilization site. The use of an *in vitro* model of bovine oviduct epithelial cells (BOECs) cultured as monolayers showed that sperm bind spontaneously to the cells and are released by progesterone and that sperm that have been bound to BOECs and released by progesterone action displayed a higher fertilization potential than those of the control (Lamy *et al.*, 2017). A comparative proteomic analysis of bound *v.* control sperm showed that a total of 27 proteins are captured by the sperm (Lamy *et al.*, 2018). One study, in particular, used recombinant heparin binding proteins, that is, fertility associated antigen and type-2 tissue inhibitor of metalloproteinase, to try and increase the fertility of sperm (Alvarez-Gallardo *et al.*, 2013). These interesting discoveries may open new research lines to improve the fertilization potential of spermatozoa, and especially of those that are of poor quality such as low fertility bulls with high genetic interest or compromised SS.

Embryo development

In IVF the fertilized oocytes are submitted to IVD for 7 days until they reach the blastocyst stage. In general, 20% to 40% of the cultured presumptive zygotes will reach the blastocyst stage (Rizos *et al.*, 2008). After reaching the blastocyst stage, embryo transfer is performed following similar procedures as with *in vivo* blastocysts, or embryos are cryopreserved. However, only high-quality IVP embryos are recommended for cryopreservation in order to achieve higher post-thaw viability results overall, which can help increase pregnancy rates in the case of direct embryo transfer protocols. The most popular freezing method for IVP embryos is still vitrification

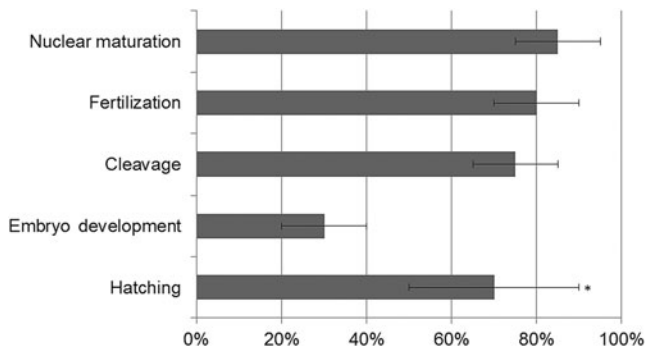


Figure 4 *Bos indicus* and *Bos taurus* *in vitro*-produced (IVP) embryo success in each successive step.

(Vajta, 2000), although slow freezing is seeing a resurgence in popularity (Bruyere *et al.*, 2012). New trends point out that selecting the 'best' or most viable embryos that tolerate the cryopreservation process for direct transfer, achieve the highest pregnancy rates. Individual embryo oxygen consumption rate, key substrate metabolite consumption uptake analysis (pyruvate, glucose, amino acids, among others) and production of metabolites via cellular metabolism (i.e., lactate) could become a gold standard (Donnay *et al.*, 1999).

Considering the high maturation and cleavage rates achieved, the relatively low rates of embryonic development to the blastocyst stage present a problem (Merton *et al.*, 2003). Between 20% and 40% of cultured presumptive zygotes will reach the blastocyst stage (Loneragan *et al.*, 2001) (Figure 4). This phenomenon may be due to incomplete cytoplasmic oocyte maturation, inadequate culture conditions, leading to impaired embryonic genome activation, or DNA fragmentation (Sirard *et al.*, 2006). Although maturation conditions can influence oocyte developmental competence, Tesfaye *et al.* (2009) demonstrated that differences in oocyte developmental capacity after IVM *v.* maturation *in vivo* were accompanied by distinct differences in transcript abundance of the surrounding cumulus cells, with 64 genes differentially expressed between the two groups. More specifically, genes associated with cumulus expansion and regulation of oocyte maturation were upregulated in *in vivo*-derived cumulus cells, whereas cumulus cells associated with IVM oocytes were enriched for genes involved in response to stress (Tefaye *et al.*, 2009). New insight is needed to determine real oocyte competence and subsequent factors affecting developmental competence such as its ability to fuse with sperm, pronuclei formation, initiation of cell division, compaction and inner cell allocation, and blastulation.

Notably, a new technique called high-resolution chromosome conformation capture (Hi-C) is shedding some light on how chromatin structure changes from the oocyte to the cleaving embryo and whether separate pronuclei, representative of the paternal and maternal genomes, are exhibiting normal epigenetic patterning at appropriate stages of development (Akst, 2017). This procedure could help elucidate where the failure in embryo development resides, that is,

whether it is male- or female-derived, and steps to correct it could be implemented.

Initially, culture of bovine embryos was not performed *in vitro* but in the oviducts of various species (mice, rabbits, sheep and cattle, among the most popular; Lazzari *et al.*, 2010). In order to mimic the oviduct conditions, the first IVC included monolayers of BOECs for co-culture, which proved to be effective in producing high-quality freezable blastocysts (Abe and Hoshi, 1997). The introduction of co-culture as embryo support aimed at (1) overcoming the early embryonic development arrest/blockage at the 8- to 16-cell stage, (2) increasing the blastocyst rate and (3) improving embryo quality and cryopreservation success (Orsi and Reischl, 2007). The use of conditioned media from BOECs can mimic the co-culture effect, improving embryo development rate and quality (Eyestone and First, 1989) and even serum-free conditioned media can be used in this view (Mermillod *et al.*, 1993). *In vivo*, the oviduct fluid contains many proteins, including growth factors, heat shock proteins, free radical scavengers and enzymes, and its protein composition is evolving during the estrous cycle (Lamy *et al.*, 2018). During culture, the BOECs are dedifferentiating and change their gene expression profile (Schmaltz-Panneau *et al.*, 2015), for instance, losing the expression of the P4 receptor and of oviduct specific glycoprotein (OVGP) which probably induces changes in their protein secretion profile and makes them unable to respond properly to hormonal stimulation. The oviduct fluid, as well as the BOEC conditioned media, has been shown to contain EVs, including a majority of exosomes (Alminana *et al.*, 2017). These EVs are able to cross the ZP and to be internalized by embryonic cells. In addition, the supplementation of the synthetic oviduct fluid (SOF) medium used for IVD improved the embryo development rate and quality. The identification of active factors in exosomes and their use in IVD or the use of exosomes themselves to help embryo development may represent an interesting research line for improving the quality of IVP embryos.

Culture conditions can influence embryo quality and cryotolerance (Rizos *et al.*, 2002). Different strategies have been used to compensate the current suboptimal IVP embryo development microenvironment. One of the most popular strategies involves the addition of supplements such as fetal bovine serum (FBS), serum replacements or bovine serum albumin (BSA). FBS, above certain concentrations (>5% v/v), may improve embryo production, but it has been associated with compromising cryotolerance (Rizos *et al.*, 2003) and inducing LOS (Lazzari *et al.*, 2002). When bovine zygotes were cultured in the ewe (Lazzari *et al.*, 2010), rabbit (Ectors *et al.*, 1993), mouse (Rizos *et al.*, 2010) or even the homologous bovine (Gad *et al.*, 2012) oviduct, blastocyst quality, cryotolerance, embryonic genome activation and gene expression were similar to that of the *in vivo*-derived counterpart. Furthermore, the use of BOECs showed positive effects on embryo development and quality (Schmaltz-Panneau *et al.*, 2015). The composition of oviductal fluid

(OF) is very complex (Li and Winuthayanon, 2017) and its addition to the culture phase enhanced embryo development rates and blastocyst quality assessed through cryotolerance, differential allocation of inner cell mass and trophectoderm cells, and gene expression (Lopera-Vasquez *et al.*, 2017).

The use of FBS has been demonstrated to cause severe fetal/calf deviations collectively referred to as LOS (Farin *et al.*, 2001). The use of FBS as a culture additive remains controversial. Addition of serum at levels greater than 10% (v/v) may cause LOS; however, FBS seems to stimulate embryo development from day 4 to day 5 of culture (Thompson *et al.*, 1998; Holm *et al.*, 1999) even at reduced concentrations (<3% v/v). Currently, serum-free media formulations based on the use of serum replacements or BSA can result in similar or even higher blastocyst rates and quality as compared to those including FBS (Stroebech *et al.*, 2015).

Importance of media for *in vitro* production of embryos

With the increasing commercial implementation of bovine embryo IVP worldwide, there is an increased focus on optimizing blastocyst yield and quality. Furthermore, an emphasized focus on regulatory restrictions concerning import/export of embryos cultured in media containing animal-based serum, due to the risk of spreading pathogens, has increased the desire to exclude serum from IVP media.

Although the commercial use of IVP embryos has been growing worldwide, there still exists a need to improve yield and quality in order to increase the pregnancy rate and achieve deep freezing for direct transfer. In addition, limited options concerning serum-free specially formulated bovine culture media are commercially available today that comply with the international standards and regulations defined by IETS (Stroebech *et al.*, 2015). The Danish company, EmbryoTrans Biotech ApS (Haslev, Denmark), has developed an entire portfolio of IVP media with synthetic serum replacement in which all steps from IVM through IVF and IVD until the blastocyst stage are performed in media without serum. The vast majority of bovine commercial and research IVP laboratories prepared all their own culture media in-house using commercially available mammalian cell culture solutions, such as Tissue Culture Medium 199 (TCM 199; Sigma-Aldrich, St. Louis, MO, USA), or Tyrode's Albumin Lactate Pyruvate (TALP; Parrish *et al.*, 1986) and SOF (Holm *et al.*, 1999) stocks with additives. In general, bovine IVP culture

media required balanced salt solution (Earle's salts for M199), sodium bicarbonate, essential and non-essential amino acids, L-glutamine, phosphatase, pyruvate, antibiotics, vitamins, EDTA, sugar (fructose or glucose) and other protector factors (i.e., antioxidants) and gamete/embryo performance promoters or nutrients (Gardner, 2008).

As a medium for IVD of embryos, SOF has been used as the most continuous culture medium system. However, an increasing interest to perform sequential culture has evolved at some of the commercial bovine laboratories. The concept of sequential media was specifically designed to meet the changing requirements of the embryo during this developmental period (Thompson and Peterson, 2000) (Figure 5). The sequential media culture system is based on the concept that the embryo has different needs during its growth and that the ability to metabolize glucose is acquired progressively (Bavister, 1995). On the other hand, a monoculture medium system includes a single formulation with the need to ensure embryo development up to blastocyst stage. The science behind this approach is to allow the embryo to choose ('à la carte') the necessary nutrients to support full development (Gardner and Lane, 2002). Both strategies, sequential and monoculture medium systems, could be equally efficient (Macklon *et al.*, 2002), where less pH and temperature disturbances may occur during a monoculture system culture (Swain, 2010). The advantage of minimizing outside incubator manipulations may contribute to improved blastocyst formation performance and act as a compensation factor. The production of autocrine/paracrine beneficial factors by close-proximity embryos and the fact to maintaining constant culture conditions could contribute to an increased concentration of such autocrine/paracrine embryo promoting factors and increase their survival (Gopichandran and Leese, 2006).

Several bovine sequential embryo culture media have been presented in publications: Early-SOF/Late-SOF (Thompson, 2000), SOFC1/SOFC2 (Gandhi *et al.*, 2000), G1/G2 (Lane *et al.*, 2003) and CDM-1/CDM-2 (Olson and Seidel, 2000). The two-step sequential media may involve the addition and/or subtraction of particular components of the basal medium formulation (Thompson *et al.*, 1998; Lane *et al.*, 2003). Another variation in this two-step sequential media protocol is the use of two completely different culture media, that is, each with unique chemical components, for each developmental growing phase (KSOM/SOF) (Nedambale *et al.*, 2004).

Single formulation (one-step) bovine embryo culture media such as CR1 (Rosenkrans and First, 1994), SOF

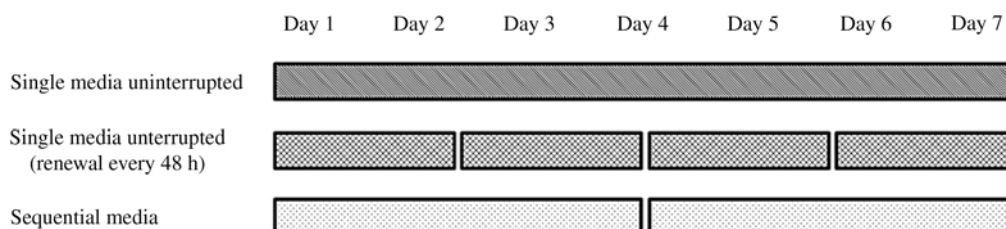


Figure 5 Schematic representation of three approaches to culturing *Bos indicus* and *Bos taurus* embryos from the zygote to blastocyst stage.

Table 2 Advantages and disadvantages of three approaches to culturing mammalian embryos from the zygote to blastocyst stage (Biggers and Summers, 2008)

Characteristic	Single medium (uninterrupted)	Single medium (interrupted)	Sequential medium (interrupted)
Leaves embryos undisturbed	Yes	No	No
Accumulated endogenous growth factors	Left in place	Lost	Lost
Replacement of essential nutrients	No	Yes	Yes
Accumulated toxins	Left in place	Removed	Removed
Relative environmental stress to embryos	Low	Moderate	High
Required quality control	One medium	One medium	Several media
Relative labor intensity	Low	Moderate	High
Relative cost	Low	Low	High

(Tervit *et al.*, 1972), BECM (Lim *et al.*, 1999), KSOM (Liu and Foote, 1995) and IVD101 (Abe and Hoshi, 2003) usually come in two versions: without renewal (uninterrupted; Holm *et al.*, 1999) or with renewal (interrupted) every 48 h to prevent the accumulation of toxic substances (Moore *et al.*, 2007). Figure 5 illustrates the temporal aspects often associated with these one-step v. two-step embryo culture media protocols. New bovine commercial 'ready to use' and 'serum-free' IVP media have been released and (Stroebech *et al.*, 2015) may contribute to more stable production systems, as they reduce the batch-to-batch variability of a laboratory-made medium. Advantages and disadvantages of the single monoculture media and sequential media formulations are presented in Table 2.

Current modern benchtop incubators have switched from large volume capacity (>150 l) to mini-chambers (<500 ml). These new incubators offer multiple independent compartments each equipped with temperature, CO₂ and O₂ sensors enabling total control of each environment separately and providing faster recovery times (Kelly and Cho, 2014). In addition, embryo developmental insight into rates of development and identification of morphological abnormalities occurring at given stages of development has been gained using real time-lapse embryo culture monitoring systems with built-in cameras installed inside the mini-chamber incubator (Kovacs, 2014). Such systems combine embryo appearance (morphology) and timing of early embryo cleavage divisions (kinetics) into integrated computer software to identify viable embryos with high implantation potential (Munevver *et al.*, 2017). The next generation embryo culture platforms will likely be based on microfluidic technology, changing from static to dynamic culture, automatic addition of specific chemicals at a pre-selected time, and allowing for gradual/partial changes in the medium formulation and thereby avoiding temperature and pH shocks (Wheeler and Rubessa, 2017).

With the increased use of comprehensive chromosome screening in the human IVF field, the development of an efficient and practical blastocyst biopsy system is desired. Certainly, the culture environment and the manipulations of the embryo during culture period can impact its developmental and fertility capacity potential. Due to changes in

embryo requirements during growth, the use of a specific media formulation similar to oviductal secretions may contribute to improving embryo yield performance. Under *in vivo* conditions, the developing embryo migrates from the oviduct to the uterine lumen where the fluid composition and gas atmosphere are likely different. Therefore, static culture systems may not be adequately re-creating the necessary embryo development environment. The dynamic systems, on the other hand, allow a gradual, precise and time-specific alteration of culture media, restore consumed nutrients, supply new nutrients and remove waste and toxic metabolic derivatives, offer the automation of certain processes (denudation), while facilitating basic gamete/embryo handling and reduced environmental stress (Wheeler and Rubessa, 2017).

There is a remarkable knowledge platform of the necessary requirements at several stages of embryo development for achieving optimal developmental rates although much can still be learned from embryo culture systems that provide important insights in order to develop a completely defined and optimized media (Baltz, 2013). Novel devices, platforms and dynamic systems may offer a pathway toward the optimization of embryo culture conditions, attempting to maximize gamete competence, viability, cryotolerance and pregnancy rate (Zhao and Fu, 2017). Quality of *in vitro*-derived embryos is still inferior compared to those derived *in vivo*. However, culture of *in vitro*-produced bovine zygotes under *in vivo* (ewe or cow oviduct) conditions restores their quality similar to totally *in vivo*-produced embryos. Conversely, *in vivo*-produced bovine zygotes cultured *in vitro* typically produce blastocysts with a lower quality compared to fully *in vivo*-cultured blastocysts.

Viable gametes and embryos possess unique molecular profiles and 'omics technologies', including transcriptomics, proteomics and metabolomics, may be considered potential biomarkers and be utilized for embryo developmental and/or embryo viability selection (Fontanesi, 2016). In addition, the use of extracellular RNA analysis of the embryo culture media appears to be another promising embryo selection technology (Kropp and Khatib, 2015). The combination of advanced energetic substrate metabolism analysis with real time-lapse embryo monitoring allows for continuous, non-invasive embryo observation and selection. Different prognostic

factors (timing of the first cleavage, number of blastomeres, timing of morula compaction and inner cell allocation, timing of blastocoel formation, developmental arrest, blastocyst formation) could also help to identify the embryos with the highest chances of surviving cryopreservation, as well as for improving pregnancy rates. Although there is still much to be done, with regard to investigation and validation, several upfront advantages may increase IVF/IVP performance due to a drastic reduction in routine culture dish air exposure for recording specific information (cleavage, blastocyst formation, hatching) and elimination of subjective morphological embryo quality evaluation given the questionable viability predictive value.

Another interesting and recent technology has been successfully applied concerning the vitrification and ultra-rapid thawing of zebrafish embryos and coral larvae. The new vitrification method addresses the cryopreservation problem by using gold nanorods (GNRs) to assist with the thawing process. Khosla *et al.* (2017) microinjected propylene glycol into zebrafish embryos along with GNRs, followed by vitrification in liquid nitrogen. They demonstrated the ability to rapidly thaw the zebrafish embryos rapidly (1.4×10^7 °C/min) by irradiating the sample with a 1064 nm laser pulse for 1 ms. Recently, a similar procedure was conducted resulting in the first successful vitrification and post-thaw survival of coral larvae (Daly *et al.*, 2018). To our knowledge, this type of vitrification approach has not yet been applied to bovine oocytes and embryos, but the technique may hold promise under certain circumstances, for example, vitrification of immature oocytes of difficult-to-cryopreserve domestic and wild species or even cloned embryos.

Preconditioning follicles prior to oocyte retrieval through synchronization and stimulation can contribute to achieving the ultimate goal of reaching 100% blastocyst development under standard *in vitro* conditions (Nivet *et al.*, 2012). This evidence also demonstrates that despite a suboptimal culture environment, the system does not handicap zygote performance when initial oocyte competence is not compromised. Furthermore, embryo formation is mainly affected by oocyte origin, while cryosurvival and gene expression can be altered by culture conditions regardless of the origin of the oocyte (Loneragan *et al.*, 2003).

Presently, bovine *in vitro*-derived embryos are less competent in terms of implanting and making a pregnancy, and more sensitive to the cryopreservation process compared with *in vivo*-frozen embryos (Nedambale *et al.*, 2004). After the genomic era, embryos in different stages of development could be compared against *in vivo* in order to establish abnormalities in expression patterns. *In vitro* embryos are particularly sensitive to culture conditions at four-cell and morula stages (Gad *et al.*, 2012). Nevertheless, we should expect gene expression, metabolism, performance and tolerance differences between *in vitro*-derived and *in vivo* embryos due to the fact that the *in vitro* environment is not exactly the same as the *in vivo* one. These differences observed between *in vitro* and *in vivo* embryos could be

explained as an adaptive response to the environment and culture conditions. Certainly, the epigenetic effect in embryos as a consequence of culture conditions required adjustments (Wrenzycki, 2016). Embryo selection prior to transfer remains as a subjective phenotype analysis performed by a skilled embryologist. Consequently, new non-invasive techniques to select viable embryos are required in order to predict *in vitro* developmental potential and implantation success (Van Soom *et al.*, 2003). Therefore, cryoresistance evaluation was added as a viability test parameter (Massip and Leibo, 2002) along with many other biomarker-based methods to supplement the traditional morphological assessment (Rødgaard *et al.*, 2015). New approaches, such as morphokinetics (Sugimura *et al.*, 2017) and advanced genomic screening techniques, may become routine for embryo selection in a commercial IVP laboratory. In the near future, CRISPRCas-9 type-related technologies could assist in performing precise genome editing or epigenome editing for biomedical applications and bioreactors (Yum *et al.*, 2018).

Conclusions

There are still unresolved drawbacks of IVP that limit a wider implementation of the technology including reduced oocyte quality after IVM, lower embryo cryotolerance and reduced pregnancy rates. Communication between embryo and maternal environment is probably an important research target to understand and use maternal factors that can positively regulate embryo development. Novel improved sperm sexing technologies have been reported to result in better fertility and conception rates using artificial intelligence and potentially also IVP. Nevertheless, more data are needed to consolidate this promising research. The combination of OPU, IVP, SS and GS has proven successful in the commercial field in several countries, thereby permitting practitioners and cattle producers to improve reproductive performance, efficiency and genetic gain.

Acknowledgement

The writing process was supported by Innovation Fund Denmark (EliteOva).

Declaration of interest

None.

Ethics statement

None.

Software and data repository resources

None.

References

- Abe H and Hoshi H 1997. Bovine oviductal epithelial cells: their cell culture and applications in studies for reproductive biology. *Cytotechnology* 23, 171–183.
- Abe H and Hoshi H 2003. Evaluation of bovine embryos produced in high performance serum-free media. *Journal of Reproduction and Development* 49, 193–202.
- Akst J 2017. New techniques detail embryos' first hours and days. *The Scientist* 31, 28–35.
- Albuz FK, Sasseville M, Lane M, Armstrong DT, Thompson JG and Gilchrist RB 2010. Simulated physiological oocyte maturation (SPOM): a novel *in vitro* maturation system that substantially improves embryo yield and pregnancy outcomes. *Human Reproduction* 25, 2999–3011.
- Alminaca C, Corbin E, Tsikis G, Alcántara-Neto AS, Labas V, Reynaud K, Galio L, Uzbekov R, Garanina AS, Druart X and Mermillod P 2017. Oviduct extracellular vesicles protein content and their role during oviduct-embryo cross-talk. *Reproduction* 154, 153–168.
- Alvarez-Gallardo H, Kjelland ME, Moreno JF, Welsh TH Jr., Randel RD, Lammoglia MA, Perez-Martinez M, Lara-Sagahon AV, Esperon-Sumano AE and Romo S 2013. Gamete therapeutics: recombinant protein adsorption by sperm for increasing fertility via artificial insemination. *PLOS ONE* 8, 1–8.
- An LY, Chaubal SA, Liu Y, Chen Y, Nedambale TL, Xu J, Xue F, Moreno JF, Tao S, Presicce GA and Du F 2017. Significant heparin effect on bovine embryo development during sexed *in vitro* fertilization. *Journal of Reproduction and Development* 63, 175–183.
- Baldassarre H, Currin L, Michalovic L, Bellefleur AM, Gutierrez K, Mondadori RG, Glanzner WG, Schuermann Y, Bohrer RC, Dicks N, Lopez R, Grand FX, Vigneault C, Blondin P, Gourdon J and Bordignon V 2018. Interval of gonadotropin administration for *in vitro* embryo production from oocytes collected from Holstein calves between 2 and 6 months of age by repeated laparoscopy. *Theriogenology* 116, 64–70.
- Baltz JM 2013. Connections between preimplantation embryo physiology and culture. *Journal of Assisted Reproduction and Genetics* 30, 1001–1007.
- Bavister BD 1995. Culture of preimplantation embryos: facts and artifacts. *Human Reproduction Update* 1, 91–148.
- Berglund B 2008. Genetic improvement of dairy cow reproductive performance. *Reproduction in Domestic Animals* 43, 89–95.
- Bermejo-Alvarez P, Lonergan P, Rath D, Gutierrez-Adan A and Rizos D 2010a. Developmental kinetics and gene expression in male and female bovine embryos produced *in vitro* with sex-sorted spermatozoa. *Reproduction, Fertility and Development* 22, 426–436.
- Bermejo-Alvarez P, Rizos D, Rath D, Lonergan P and Gutierrez-Adan A 2010b. Sex determines the expression level of one third of the actively expressed genes in bovine blastocysts. *Proceedings of the National Academy of Sciences* 107, 3394–3399.
- Biggers JD and Summers MC 2008. Choosing a culture medium: making informed choices. *Fertility and Sterility* 90, 473–483.
- Blondin P, Beaulieu M, Fournier V, Morin N, Crawford L, Madan P and King WA 2009. Analysis of bovine sexed sperm for IVF from sorting to the embryo. *Theriogenology* 71, 30–38.
- Bols PE, Leroy JLMR, Vanholder T and Van Soom A 2004. A comparison of a mechanical sector and a linear array transducer for ultrasound-guided transvaginal oocyte retrieval (OPU) in the cow. *Theriogenology* 62, 906–914.
- Bols PE, Leroy JLMR and Viana JHM 2005. Technical and biological aspects of ultrasound-guided transvaginal oocyte retrieval in the cow: an overview. *Acta Scientiae Veterinariae*, 103–108.
- Bruyere P, Baudot A, Guyader-Joly C, Guerin P, Louis G and Buff S 2012. Improved cryopreservation of *in vitro*-produced bovine embryos using a chemically defined freezing medium. *Theriogenology* 78, 1294–1302.
- Cavaliere FLB, Morotti F, Seneda MM, Colombo AHB, Andreazzi MA, Emanuelli IP and Rigolon LP 2017. Improvement of bovine *in vitro* embryo production by ovarian follicular wave synchronization prior to ovum pick-up. *Theriogenology* 117, 57–60.
- Chaubal SA, Ferre LB, Molina JA, Faber DC, Bols PE, Rezamand P, Tian X and Yang X 2007. Hormonal treatments for increasing the oocyte and embryo production in an OPU-IVP system. *Theriogenology* 67, 719–728.
- Cognié Y, Baril G, Poulin N and Mermillod P 2003. Current status of embryo technologies in sheep and goat. *Theriogenology* 59, 171–188.
- da Silveira JC, Andrade GM, Del Collado M, Sampaio RV, Sangalli JR, Silva LA, Pinaffi FVL, Jardim IB, Cesar MC, Nogueira MFG, Cesar ASM, Coutinho LL, Pereira RW, Perecin F and Meirelles FV 2017. Supplementation with small-extracellular vesicles from ovarian follicular fluid during *in vitro* production modulates bovine embryo development. *PLOS ONE* 12, 1–25.
- Daly J, Zuchowicz N, Nuñez Lendo CI, Khosla K, Lager C, Henley EM, Bischof J, Kleinhans FW, Lin C, Peters EC and Hagedorn M 2018. Successful cryopreservation of coral larvae using vitrification and laser warming. *Scientific Reports* 8, 1–10.
- de Graaf SP, Evans G, Maxwell WM, Cran DG and O'Brien JK 2007. Birth of offspring of pre-determined sex after artificial insemination of frozen-thawed, sex-sorted and re-frozen-thawed ram spermatozoa. *Theriogenology* 67, 391–398.
- de Loos F, van Vliet C, van Maurik P and Kruij TA 1989. Morphology of immature bovine oocytes. *Gamete Research* 24, 197–204.
- de Sousa RV, da Silva Cardoso CR, Butzke G, Dode MAN, Rumpf R and Franco MM 2017. Biopsy of bovine embryos produced *in vivo* and *in vitro* does not affect pregnancy rates. *Theriogenology* 90, 25–31.
- Di Pietro C 2016. Exosome-mediated communication in the ovarian follicle. *Journal of Assisted Reproduction and Genetics* 33, 303–311.
- Donnay I, Partridge RJ and Leese HJ 1999. Can embryo metabolism be used for selecting bovine embryos before transfer? *Reproduction Nutrition and Development* 39, 523–533.
- Druart X, Cognie J, Baril G, Clement F, Dacheux JL and Gatti JL 2009. *In vivo* imaging of *in situ* motility of fresh and liquid stored ram spermatozoa in the ewe genital tract. *Reproduction* 138, 45–53.
- Dunning KR, Russell DL and Robker RL 2014. Lipids and oocyte developmental competence: the role of fatty acids and β -oxidation. *Reproduction* 148, R15–R27.
- Ectors FJ, Thonon F, Delval A, Fontes RS, Touati K, Beckers JF and Ectors F 1993. Comparison between culture of bovine embryos *in vitro* versus development in rabbit oviducts and *in vivo*. *Livestock Production Science* 36, 29–34.
- Eyestone WH and First NL 1989. Co-culture of early cattle embryos to the blastocyst stage with oviductal tissue or in conditioned medium. *Journal of Reproduction and Fertility* 85, 715–720.
- Farin PW, Crosier AE and Farin CE 2001. Influence of *in vitro* systems on embryo survival and fetal development in cattle. *Theriogenology* 55, 151–170.
- Feres LF, Siqueira LGB, Palhao MP, Dos Santos LL, Brandao FZ and Viana JHM 2018. Likelihood of pregnancy after the transfer of embryos derived from follicle aspiration and *in vitro* embryo production sessions with different relative efficiencies. *Animal Reproduction Science* 193, 165–170.
- Fernandes CAdC, Miyauchi TM, Figueiredo ACSd, Palhão MP, Varago FC, Nogueira ESC, Neves JP and Miyauchi TA 2014. Hormonal protocols for *in vitro* production of Zebu and taurine embryos. *Pesquisa Agropecuária Brasileira* 49, 813–817.
- Fontanesi L 2016. Metabolomics and livestock genomics: insights into a phenotyping frontier and its applications in animal breeding. *Animal Frontiers* 6, 73–79.
- Fulka J Jr., First NL and Moor RM 1998. Nuclear and cytoplasmic determinants involved in the regulation of mammalian oocyte maturation. *Molecular Human Reproduction* 4, 41–49.
- Gad A, Hoelker M, Besenfelder U, Havlicek V, Cinar U, Rings F, Held E, Dufort I, Sirard MA, Schellander K and Tesfaye D 2012. Molecular mechanisms and pathways involved in bovine embryonic genome activation and their regulation by alternative *in vivo* and *in vitro* culture conditions. *Biology of Reproduction* 87, 1–13.
- Galli C, Duchi R, Crotti G, Turini P, Ponderato N, Colleoni S, Lagutina I and Lazzari G 2003. Bovine embryo technologies. *Theriogenology* 59, 599–616.
- Gandhi AP, Lane M, Gardner DK and Krisher RL 2000. A single medium supports development of bovine embryos throughout maturation, fertilization and culture. *Human Reproduction* 15, 395–401.
- Gardner DK 2008. Dissection of culture media for embryos: the most important and less important components and characteristics. *Reproduction, Fertility and Development* 20, 9–18.
- Gardner DK and Lane M 2002. Development of viable mammalian embryos *in vitro*: evolution of sequential media. In *Principles of cloning* (ed. J Cibelli, RP Lanza, KHS Campbell and MD West), pp. 187–213, Academic Press, San Diego, CA, USA.
- Garner DL 2001. Sex-sorting mammalian sperm: concept to application in animals. *Journal of Andrology* 22, 519–526.

- Garner DL, Evans KM and Seidel GE Jr. 2013. Sex-sorting sperm using flow cytometry/cell sorting. *Methods in Molecular Biology* 927, 279–295.
- Goddard ME, Hayes BJ and Meuwissen THE 2010. Genomic selection in livestock populations. *Genetics Research* 92, 413–421.
- Gonzalez-Marin C, Lenz RW, Gilligan TB, Evans KM, Gongora CE, Moreno JF and Vishwanath R 2017. SexedULTRA™, a new method of processing sex sorted bovine sperm improves post-thaw sperm quality and in vitro fertility. *Reproduction, Fertility and Development* 29, 204–204.
- Gopichandran N and Leese HJ 2006. The effect of paracrine/autocrine interactions on the in vitro culture of bovine preimplantation embryos. *Reproduction* 131, 269–277.
- Gordon I 2003. In vitro fertilization. In *Laboratory production of cattle embryos* (ed. I Gordon), pp. 176–219, CABI Publishing, Oxon, UK.
- Goto K, Kajihara Y, Kosaka S, Koba M, Nakanishi Y and Ogawa K 1988. Pregnancies after co-culture of cumulus cells with bovine embryos derived from in-vitro fertilization of in-vitro matured follicular oocytes. *Journal of Reproduction and Fertility* 83, 753–758.
- Gross N, Kropp J and Khatib H 2017. MicroRNA signaling in embryo development. *Biology (Basel)* 6, 1–22.
- Guimarães ALS, Pereira SA, Leme LO and Dode MAN 2015. Evaluation of the simulated physiological oocyte maturation system for improving bovine in vitro embryo production. *Theriogenology* 83, 52–57.
- Hansen PJ 2006. Realizing the promise of IVF in cattle – an overview. *Theriogenology* 65, 119–125.
- Hasler JF 1998. The current status of oocyte recovery, in vitro embryo production, and embryo transfer in domestic animals, with an emphasis on the Bovine. *Journal of Animal Science* 76, 52–74.
- Holm P, Booth PJ, Schmidt MH, Greve T and Callesen H 1999. High bovine blastocyst development in a static in vitro production system using SOFaa medium supplemented with sodium citrate and myo-inositol with or without serum-proteins. *Theriogenology* 52, 683–700.
- Hung WT, Hong X, Christenson LK and McGinnis LK 2015. Extracellular vesicles from bovine follicular fluid support cumulus expansion. *Biology of Reproduction* 93, 1–9.
- Hyttel P, Fair T, Callesen H and Greve T 1997. Oocyte growth, capacitation and final maturation in cattle. *Theriogenology* 47, 23–32.
- Hyttel P, Xu KP, Smith S and Greve T 1986. Ultrastructure of in-vitro oocyte maturation in cattle. *Journal of Reproduction and Fertility* 78, 615–625.
- Johnson LA 1995. Sex preselection by flow cytometric separation of X and Y chromosome-bearing sperm based on DNA difference: a review. *Reproduction, Fertility and Development* 7, 893–903.
- Kasinathan P, Wei H, Xiang T, Molina JA, Metzger J, Broek D, Kasinathan S, Faber DC and Allan MF 2015. Acceleration of genetic gain in cattle by reduction of generation interval. *Scientific Reports* 5, 1–4.
- Kelly E and Cho T 2014. Incubators old and new. In *Culture media, solutions, and systems in human ART* (ed. P Quinn), pp. 258–269, Cambridge University Press, Cambridge, UK.
- Khosla K, Wang Y, Hagedorn M, Qin Z and Bischof J 2017. Gold Nanorod Induced Warming of Embryos from the Cryogenic State Enhances Viability. *ACS Nano* 11, 7869–7878.
- Killian G 2011. Physiology and endocrinology symposium: evidence that oviduct secretions influence sperm function: a retrospective view for livestock. *Journal of Animal Science* 89, 1315–1322.
- Kovacs P 2014. Embryo selection: the role of time-lapse monitoring. *Reproductive Biology and Endocrinology* 12, 1–11.
- Krisner RL 2004. The effect of oocyte quality on development. *Journal of Animal Science* 82, E14–E23.
- Kropp J and Khatib H 2015. mRNA fragments in in vitro culture media are associated with bovine preimplantation embryonic development. *Frontiers in Genetics* 6, 1–7.
- Lamy J, Corbin E, Blache MC, Garanina AS, Uzbekov R, Mermillod P and Saint-Dizier M 2017. Steroid hormones regulate sperm-oviduct interactions in the bovine. *Reproduction* 154, 497–508.
- Lamy J, Noguez P, Combes-Soia L, Tsikis G, Labas V, Mermillod P, Druart X and Saint-Dizier M 2018. Identification by proteomics of oviductal sperm-interacting proteins. *Reproduction* 155, 457–466.
- Lane M, Gardner DK, Hasler MJ and Hasler JF 2003. Use of G1. 2/G2. 2 media for commercial bovine embryo culture: equivalent development and pregnancy rates compared to co-culture. *Theriogenology* 60, 407–419.
- Lazzari G, Colleoni S, Lagutina I, Crotti G, Turini P, Tessaro I, Brunetti D, Duchi R and Galli C 2010. Short-term and long-term effects of embryo culture in the surrogate sheep oviduct versus in vitro culture for different domestic species. *Theriogenology* 73, 748–757.
- Lazzari G, Wrenzycki C, Herrmann D, Duchi R, Kruij T, Niemann H and Galli C 2002. Cellular and molecular deviations in bovine in vitro-produced embryos are related to the large offspring syndrome. *Biology of Reproduction* 67, 767–775.
- Leibfried-Rutledge ML, Critser ES, Eyestone WH, Northey DL and First NL 1987. Development potential of bovine oocytes matured in vitro or in vivo. *Biology of Reproduction* 36, 376–383.
- Li S and Winuthayanon W 2017. Oviduct: roles in fertilization and early embryo development. *Journal of Endocrinology* 232, R1–R26.
- Lim JM, Mei Y, Chen B, Godke RA and Hansel W 1999. Development of bovine IVF oocytes cultured in medium supplemented with a nitric oxide scavenger or inhibitor in a co-culture system. *Theriogenology* 51, 941–949.
- Liu Z and Foote RH 1995. Development of bovine embryos in KSOM with added superoxide dismutase and taurine and with five and twenty percent O₂. *Biology of Reproduction* 53, 786–790.
- Liu X, Hu T, Sun W, Hao H, Liu Y, Zhao X, Zhu H and Du W 2015. Comparison of the developmental competence and quality of bovine embryos obtained by in vitro fertilization with sex-sorted and unsorted semen from seven bulls. *Livestock Science* 181, 263–270.
- Loneragan P, Rizos D, Gutierrez-Adan A, Fair T and Boland MP 2003. Effect of culture environment on embryo quality and gene expression – experience from animal studies. *Reproductive BioMedicine Online* 7, 657–663.
- Loneragan P, Rizos D, Ward F and Boland MP 2001. Factors influencing oocyte and embryo quality in cattle. *Reproduction Nutrition Development* 41, 427–437.
- Lopera-Vasquez R, Hamdi M, Maillo V, Gutierrez-Adan A, Bermejo-Alvarez P, Ramirez MÁ, Yáñez-Mó M and Rizos D 2017. Effect of bovine oviductal extracellular vesicles on embryo development and quality in vitro. *Reproduction* 153, 461–470.
- Lu KH, Cran DG and Seidel GE Jr. 1999. In vitro fertilization with flow-cytometrically-sorted bovine sperm. *Theriogenology* 52, 1393–1405.
- Lu KH and Polge C 1992. A summary of two-year's results in large scale in vitro bovine embryo production. In *Proceedings of the 12th International Congress on Animal Reproduction*, 23–27 August 1992, the Hague, Netherlands, pp. 1315–1317.
- Lu KH and Seidel GE Jr. 2004. Effects of heparin and sperm concentration on cleavage and blastocyst development rates of bovine oocytes inseminated with flow cytometrically-sorted sperm. *Theriogenology* 62, 819–830.
- Macklon NS, Pieters MH, Hassan MA, Jeucken PH, Eijkemans MJ and Fauser BC 2002. A prospective randomized comparison of sequential versus monoculture systems for in-vitro human blastocyst development. *Human Reproduction* 17, 2700–2705.
- Massip A and Leibo SP 2002. Factors influencing cryopreservation of domestic animal embryos. In *Assessment of mammalian embryo quality* (ed. A Van Soom and M Boerjan), pp. 121–138, Springer, Dordrecht, Netherlands.
- McEvoy TG, Alink FM, Moreira VC, Watt RG and Powell KA 2006. Embryo technologies and animal health – consequences for the animal following ovum pick-up, in vitro embryo production and somatic cell nuclear transfer. *Theriogenology* 65, 926–942.
- Mermillod P, Oussaid B and Cognie Y 1999. Aspects of follicular and oocyte maturation that affect the developmental potential of embryos. *Journal of Reproduction and Fertility* 54, 449–460.
- Mermillod P, Vansteenbrugge A, Wils C, Mourmeaux JL, Massip A and Dessy F 1993. Characterization of the embryotrophic activity of exogenous protein-free oviduct-conditioned medium used in culture of cattle embryos. *Biology of Reproduction* 49, 582–587.
- Mermillod P, Tomanek M, Marchal R and Meijer L 2000. High developmental competence of cattle oocytes maintained at the germinal vesicle stage for 24 hours in culture by specific inhibition of MPF kinase activity. *Molecular Reproduction and Development* 55, 89–95.
- Merton JS, de Roos APW, Mullaart E, de Ruigh L, Kaal L, Vos PLAM and Dieleman SJ 2003. Factors affecting oocyte quality and quantity in commercial application

- of embryo technologies in the cattle breeding industry. *Theriogenology* 59, 651–674.
- Mondéjar I, Martínez-Martínez I, Avilés M and Coy P 2013. Identification of potential oviductal factors responsible for zona pellucida hardening and monospermy during fertilization in mammals. *Biology of Reproduction* 89, 1–8.
- Monteiro FM, Ferreira MM, Potiens JR, Eberhardt BG, Trinca LA and Barros CM 2010. Influence of superovulatory protocols on *in vitro* production of Nellore (*Bos indicus*) embryos. *Reproduction in Domestic Animals* 45, 860–864.
- Moore K, Rodriguez-Sallaberry CJ, Kramer JM, Johnson S, Wroclawska E, Goicoa S and Niasari-Naslaji A 2007. *In vitro* production of bovine embryos in medium supplemented with a serum replacer: effects on blastocyst development, cryotolerance and survival to term. *Theriogenology* 68, 1316–1325.
- Morotti F, Sanches BV, Pontes JH, Basso AC, Siqueira ER, Lisboa LA and Seneda MM 2014. Pregnancy rate and birth rate of calves from a large-scale IVF program using reverse-sorted semen in *Bos indicus*, *Bos indicus-taurus*, and *Bos taurus* cattle. *Theriogenology* 81, 696–701.
- Munevver S, Findikli N and Bahceci M 2017. New Horizons/Developments in time-lapse morphokinetic analysis of mammalian embryos. In *Human reproduction: updates and new horizons* (ed. H Schatten), pp. 313–338, John Wiley & Sons, Inc., Hoboken, NJ, USA.
- Nedambale TL, Dinnyes A, Groen W, Dobrinsky JR, Tian XC and Yang X 2004. Comparison on *in vitro* fertilized bovine embryos cultured in KSOM or SOF and cryopreserved by slow freezing or vitrification. *Theriogenology* 62, 437–449.
- Nivet AL, Bunel A, Labrecque R, Belanger J, Vigneault C, Blondin P and Sirard MA 2012. FSH withdrawal improves developmental competence of oocytes in the bovine model. *Reproduction* 143, 165–171.
- Olson SE and Seidel GE Jr. 2000. Reduced oxygen tension and EDTA improve bovine zygote development in a chemically defined medium. *Journal of Animal Science* 78, 152–157.
- Orsi NM and Reischl JB 2007. Mammalian embryo co-culture: trials and tribulations of a misunderstood method. *Theriogenology* 67, 441–458.
- Parrish JJ, Susko-Parrish JL, Leibfried-Rutledge ML, Critser ES, Eyestone WH and First NL 1986. Bovine *in vitro* fertilization with frozen-thawed semen. *Theriogenology* 25, 591–600.
- Pieterse MC, Kappen KA, Kruip TAM and Taverne MAM 1988. Aspiration of bovine oocytes during transvaginal ultrasound scanning of the ovaries. *Theriogenology* 30, 751–762.
- Ponsart C, Le Bourhis D, Knijn H, Fritz S, Guyader-Joly C, Otter T, Lacaze S, Charreaux F, Schibler L, Dupassieux D and Mullaart E 2013. Reproductive technologies and genomic selection in dairy cattle. *Reproduction, Fertility and Development* 26, 12–21.
- Rizos D, Clemente M, Bermejo-Alvarez P, De La Fuente J, Lonergan P and Gutiérrez-Adán A 2008. Consequences of *in vitro* culture conditions on embryo development and quality. *Reproduction in Domestic Animals* 43, 44–50.
- Rizos D, Gutierrez-Adan A, Perez-Garnelo S, De La Fuente J, Boland MP and Lonergan P 2003. Bovine embryo culture in the presence or absence of serum: implications for blastocyst development, cryotolerance, and messenger RNA expression. *Biology of Reproduction* 68, 236–243.
- Rizos D, Ramirez MA, Pintado B, Lonergan P and Gutierrez-Adan A 2010. Culture of bovine embryos in intermediate host oviducts with emphasis on the isolated mouse oviduct. *Theriogenology* 73, 777–785.
- Rizos D, Ward F, Duffy P, Boland MP and Lonergan P 2002. Consequences of bovine oocyte maturation, fertilization or early embryo development *in vitro* versus *in vivo*: implications for blastocyst yield and blastocyst quality. *Molecular Reproduction and Development* 61, 234–248.
- Rødgaard T, Heegaard PMH and Callesen H 2015. Non-invasive assessment of *in-vitro* embryo quality to improve transfer success. *Reproductive BioMedicine Online* 31, 585–592.
- Rodgers RJ and Irving-Rodgers HF 2010. Formation of the ovarian follicular antrum and follicular fluid. *Biology of Reproduction* 82, 1021–1029.
- Rosenkrans CF and First NL 1994. Effect of free amino acids and vitamins on cleavage and developmental rate of bovine zygotes *in vitro*. *Journal of Animal Science* 72, 434–437.
- Saeed-Zidane M, Linden L, Salilew-Wondim D, Held E, Neuhoff C, Tholen E, Hoelker M, Schellander K and Tesfaye D 2017. Cellular and exosome mediated molecular defense mechanism in bovine granulosa cells exposed to oxidative stress. *PLOS ONE* 12, 1–24.
- Santonocito M, Vento M, Guglielmino MR, Battaglia R, Wahlgren J, Ragusa M, Barbagallo D, Borzi P, Rizzari S, Maugeri M, Scollo P, Tatone C, Valadi H, Purrello M and Di Pietro C 2014. Molecular characterization of exosomes and their microRNA cargo in human follicular fluid: bioinformatic analysis reveals that exosomal microRNAs control pathways involved in follicular maturation. *Fertility and Sterility* 102, 1751–1761.
- Schmaltz-Panneau B, Locatelli Y, Uzbekova S, Perreau C and Mermillod P 2015. Bovine oviduct epithelial cells dedifferentiate partly *in vitro*, while maintaining their ability to improve early embryo development rate and quality. *Reproduction in Domestic Animals* 50, 719–729.
- Sendag S, Cetin Y, Alan M, Hadelor K-G and Niemann H 2008. Effects of eCG and FSH on ovarian response, recovery rate and number and quality of oocytes obtained by ovum pick-up in Holstein cows. *Animal Reproduction Science* 106, 208–214.
- Silva-Santos KC, Santos GM, Koetz Junior C, Morotti F, Siloto LS, Marcantonio TN, Urbano MR, Oliveira RL, Lima DC and Seneda MM 2014. Antral follicle populations and embryo production – *in vitro* and *in vivo* – of *Bos indicus-taurus* donors from weaning to yearling ages. *Reproduction in Domestic Animals* 49, 228–232.
- Sirard MA 2001. Resumption of meiosis: mechanism involved in meiotic progression and its relation with developmental competence. *Theriogenology* 55, 1241–1254.
- Sirard MA 2018. 40 years of bovine IVF in the new genomic selection context. *Reproduction* 156, R1–R7.
- Sirard MA and Blondin P 1996. Oocyte maturation and IVF in cattle. *Animal Reproduction Science* 42, 417–426.
- Sirard MA, Richard F, Blondin P and Robert C 2006. Contribution of the oocyte to embryo quality. *Theriogenology* 65, 126–136.
- Stroebech L, Mazzoni G, Pedersen HS, Freude KK, Kadarmideen HN, Callesen H and Hyttel P 2015. *In vitro* production of bovine embryos: revisiting oocyte development and application of systems biology. *Animal Reproduction* 12, 465–472.
- Sugimura S, Akai T and Imai K 2017. Selection of viable *in vitro*-fertilized bovine embryos using time-lapse monitoring in microwell culture dishes. *Journal of Reproduction and Development* 63, 353–357.
- Suh TK, Schenk JL and Seidel GE Jr. 2005. High pressure flow cytometric sorting damages sperm. *Theriogenology* 64, 1035–1048.
- Swain JE 2010. Optimizing the culture environment in the IVF laboratory: impact of pH and buffer capacity on gamete and embryo quality. *Reproductive BioMedicine Online* 21, 6–16.
- Tanghe S, Van Soom A, Talebkhani Garoussi M, Mintiens K and de Kruif A 2000. Sperm-egg ratios above 5000: 1 do not improve *in vitro* fertilization rates in the bovine. *Journal of Reproduction and Fertility* 25, 91.
- Tervit HR, Whittingham DG and Rowson LE 1972. Successful culture *in vitro* of sheep and cattle ova. *Journal of Reproduction and Fertility* 30, 493–497.
- Tesfaye D, Ghanem N, Carter F, Fair T, Sirard M-A, Hoelker M, Schellander K and Lonergan P 2009. Gene expression profile of cumulus cells derived from cumulus-oocyte complexes matured either *in vivo* or *in vitro*. *Reproduction, Fertility and Development* 21, 451–461.
- Thompson JG 2000. *In vitro* culture and embryo metabolism of cattle and sheep embryos – a decade of achievement. *Animal Reproduction Science* 60–61, 263–275.
- Thompson JG, Allen NW, McGowan LT, Bell AC, Lambert MG and Tervit HR 1998. Effect of delayed supplementation of fetal calf serum to culture medium on bovine embryo development *in vitro* and following transfer. *Theriogenology* 49, 1239–1249.
- Thompson JG and Peterson AJ 2000. Bovine embryo culture *in vitro*: new developments and post-transfer consequences. *Human Reproduction* 15, 59–67.
- Vajta G 2000. Vitrification of the oocytes and embryos of domestic animals. *Animal Reproduction Science* 60–61, 357–364.
- Van Soom A, Mateusen B, Leroy J and de Kruif A 2003. Assessment of mammalian embryo quality: what can we learn from embryo morphology? *Reproductive BioMedicine Online* 7, 664–670.
- Van Soom A, Van Vlaenderen I, Mahmoudzadeh A and de Kruif A 1991. Bull specific effect on *in vitro* penetration and fertilization of bovine oocytes using various levels of heparin. *Assisted Reproductive Technology/Andrology* 2, 105–106.

- Vieira LM, Rodrigues CA, Castro Netto A, Guerreiro BM, Silveira CRA, Freitas BG, Bragança LGM, Marques KNG, Sá Filho MF, Bó GA, Mapletoft RJ and Baruselli PS 2016. Efficacy of a single intramuscular injection of porcine FSH in hyaluronan prior to ovum pick-up in Holstein cattle. *Theriogenology* 85, 877–886.
- Ward F, Enright B, Rizos D, Boland M and Lonergan P 2002. Optimization of in vitro bovine embryo production: effect of duration of maturation, length of gamete co-incubation, sperm concentration and sire. *Theriogenology* 57, 2105–2117.
- Ward FA, Lonergan P, Enright BP and Boland MP 2000. Factors affecting recovery and quality of oocytes for bovine embryo production in vitro using ovum pick-up technology. *Theriogenology* 54, 433–446.
- Watanabe Y, Souza HA, Mingoti R, Ferreira R, Oliveira Santana Batista E, Dayan A, Watanabe O, Meirelles F, Nogueira M, Ferraz J and Baruselli P 2017. Number of oocytes retrieved per donor during OPU and its relationship with in vitro embryo production and field fertility following embryo transfer. *Animal Reproduction* 14, 635–644.
- Watson AJ 2007. Oocyte cytoplasmic maturation: a key mediator of oocyte and embryo developmental competence. *Journal of Animal Science* 85, E1–E3.
- Webb R, Garnsworthy P, Gong J-G and Armstrong D 2004. Control of follicular growth: local interactions and nutritional influences. *Journal of Animal Science* 82, E63–E74.
- Welch GR and Johnson LA 1999. Sex preselection: laboratory validation of the sperm sex ratio of flow sorted X- and Y-sperm by sort reanalysis for DNA. *Theriogenology* 52, 1343–1352.
- Wheeler MB and Rubessa M 2017. Integration of microfluidics in animal in vitro embryo production. *Molecular Human Reproduction* 23, 248–256.
- Wrenzycki C 2016. In vitro culture systems: how far are we from optimal conditions? *Animal Reproduction* 13, 279–282.
- Xu J, Chaubal SA and Du F 2009. Optimizing IVF with sexed sperm in cattle. *Theriogenology* 71, 39–47.
- Xu J, Guo Z, Su L, Nedambale TL, Zhang J, Schenk J, Moreno JF, Dinnyes A, Ji W, Tian XC, Yang X and Du F 2006. Developmental potential of vitrified holstein cattle embryos fertilized in vitro with sex-sorted sperm. *Journal of Dairy Science* 89, 2510–2518.
- Yum S-Y, Youn K-Y, Choi W-J and Jang G 2018. Development of genome engineering technologies in cattle: from random to specific. *Journal of Animal Science and Biotechnology* 9, 1–9.
- Zhang M, Lu KH and Seidel GE Jr. 2003. Development of bovine embryos after in vitro fertilization of oocytes with flow cytometrically sorted, stained and unsorted sperm from different bulls. *Theriogenology* 60, 1657–1663.
- Zhao G and Fu J 2017. Microfluidics for cryopreservation. *Biotechnology Advances* 35, 323–336.